

menu service tv

Collection by Pravin Mevada

● SERVICE MENU

Schneider

TVs :

- * Press the {MENU} button.
- or
- * Press the {MENU} button and access the 'Install' Menu.
- * Then press the {4} {7} {2} {5} buttons.
- * The Service Menu will be displayed.
- * Use the {UP} {DOWN} buttons to select items.
- * Use the {LEFT} {RIGHT} buttons to change settings.
- * To exit, press the {MENU} or {EXIT} buttons.

2

- * Press the {VOL -} button on the TV.
- * Then press the {PROG} {-/--} {TV} buttons on the remote.
- * The Service Menu will be displayed.
- * Use the {CH+} {CH-} buttons to select items.
- * Use the {VOL+} {VOL-} buttons to change settings.
- * Use the {RED} button to save settings.
- * To exit, press the {TV} button or turn the power off.

Sharp

LCD TVs :

- * While the LCD is on, unplug the power cable.
- * Then while pressing the {INPUT} & {VOL -} buttons on the remote, plug the power cable back into the outlet.
- * When it powers up you will see a little "k" appear in brackets.
- * Then on the TV, press and hold {VOL -} & {CH -} down and release.
- * The Service Menu will be displayed.
- * Use {CH+} {CH -} buttons to navigate
- * Use {VOL+} {VOL -} buttons to adjust the value.

* Turn the set off to exit the Service Menu.

TVs :

* Unplug the power cable.

* Press and hold the {CH+} & {VOL+} buttons.

or

Press and hold the {CH+} & {VOL -} buttons.

* While holding both buttons, plug in the power cable.

* The TV will turn on with the Service Menu displayed.

* Use the {CH+} {CH -} buttons to select items.

* Use the {VOL+} {VOL -} buttons to adjust values.

* To exit, turn the set off.

Sony

PLASMA / LCD / CRT / RPTV :

* Put the TV in Standby Mode.

* Then press the following buttons on the remote:

{DISPLAY} {5} {VOL+} {POWER}

or

{DISPLAY} {5} {POWER}

or

{DISPLAY} {5} {PICTURE} {POWER}

or

{DISPLAY} {5} {VOL+} {PICTURE} {POWER}

* The TV will turn on with the Service Menu displayed.

* Use numbers {1} and {4} to select the item to adjust.

* Use numbers {3} and {6} to adjust the value of the data.

* Press {MUTE} then {ENTER} to save new settings.

* The words "WRITE" in red will show up in the upper right corner if saved.

* Turn the TV off to exit the service menu.

Telefunken

TVs :

* Press the {MENU} button on the TV and the {SETUP} button on the remote at the same time.

* The Service Menu displayed.

* Use {CH+} {CH -} buttons to select items.

* Use {VOL+} {VOL -} buttons to change values.

* To exit, press the {SETUP} button or turn the TV off.

- * Turn the TV on.
- * Press the following buttons on the remote:
- * {IMAGE} {FACTORY} {POWER} {MUTE} {1} {8} {2} {POWER}
- * The TV will power on with the Service Menu displayed.
- * Use {VOL+} {VOL -} buttons to select items.
- * Use {CH+} {CH -} buttons to change values.
- * Turn the set off to exit the Service Menu.

#3

- * Press and hold the {VOL -} button on the TV.
- * Then press the {DISPLAY} button on the remote.
- * The Service Menu will be displayed.
- * To exit, turn the TV off.

#4

- * With the TV in standby:
- Press and hold the {VOL -} & {PRG -} buttons on the TV.
- * Keep both buttons pressed until the TV turns On with the Service Menu displayed.
 - * To exit, turn the TV off.

#5

- * While the TV is on, press the {POWER} button on the remote control to put TV in standby.
- * Turn the TV off using the {POWER} button on the TV.
- * Using the buttons on the TV:
- * Turn the TV On while pressing the {PRG -} & {VOL -} buttons
- * The Service Menu will be displayed.
- * To exit, turn the TV off.

#6

- * Turn the TV on.
- * Press the {MUTE} {OK} {TV} buttons on the remote.
- * The Service Menu will be displayed.
- * Use the {UP} {DOWN} {RIGHT} {LEFT} buttons on the remote to move through menus and change values.
- * Press the {OK} button to save new settings.
- * To exit, press the {TV} button or turn the power off.

Thomson

TVs :

- * With the TV in standby:
- Press and hold the {VOL -} & {PRG -} buttons on the TV.
- * Keep both buttons pressed until the TV turns On with the Service Menu displayed.

- * Use {PR+} {PR -} buttons to select items.
- * Use {VOL+} {VOL -} buttons to change values.
- * To exit, turn the TV Off.

#2

- * While the TV is On, press the {POWER} button on the remote control to put TV in standby.
- * Turn the TV Off using the {POWER} button on the TV.
- * Using the buttons on the TV:
 - * Turn the TV On while pressing the {PRG -} & {VOL -} buttons
 - * The Service Menu will be displayed.
 - * Use {PR+} {PR -} buttons to select items.
 - * Use {VOL+} {VOL -} buttons to change values.
 - * To exit, turn the TV Off.

Toshiba

LCDs :

- * Press the {MENU} button on the remote.
- * Highlight the "Picture" icon.
- * Press the {9} {3} {0} {1} buttons on the remote.
- * The Service Menu will be displayed:

o Options

o Adjustments

o Selections

- * Use the {OK} button to access and navigate through these Modes.
- * Use the {VOL +} {VOL-} {P+} {P-} buttons to move through options and change settings.
- * To exit, press the {MENU} button.

MISC TVs :

- * Turn the TV on.
- * Press the {MUTE} button three times on the remote.
- * Press the {MUTE} button again on the remote and hold.
- * Then press the {MENU} button on the TV's front panel.
- * Release both buttons
- * There should be a letter "S" on the upper right of the screen.
- * Press the {MENU} button on the TV's front panel again.
- * The Service Menu will be displayed.
- * Use the {CH+} {CH-} buttons to select options.
- * Use the {VOL+} {VOL -} buttons to change settings.
- * To exit, turn the power off..

#2

- * Turn the TV on.
- * Press the {MUTE} button twice on the remote.
- * Press the {MUTE} button again on the remote and hold.
- * Then press the {MENU} button on the TV's front panel.
- * Release both buttons
- * There should be a letter "S" on the upper right of the screen.
- * Press the {MENU} button on the TV's front panel again.

- * The Service Menu will be displayed.
- * Use the {CH+} {CH-} buttons to select options.
- * Use the {VOL+} and {VOL -} buttons to change settings.
- * To exit, turn the power off.

#3

- * Turn the TV on.
- * Press the {MUTE} button on the remote.
- * Press the {MUTE} button again on the remote and hold.
- * Then press the {MENU} button on the TV's front panel.
- * Release both buttons
- * There should be a letter "S" on the upper right of the screen.
- * Press the {MENU} button on the TV's front panel again.
- * The Service Menu will be displayed.
- * Use the {CH+} {CH-} buttons to select options.
- * Use the {VOL+} and {VOL -} buttons to change settings.
- * To exit, turn the power off.

#4

- * Turn volume all the way down to '0'
- * Then press and hold the {VOL -} button on the TV and the {9} button on the remote control for few seconds.
- * The Service Menu will be displayed.
- * Use the {CH+} {CH-} buttons to select options.
- * Use the {VOL+} {VOL-} buttons to change settings.
- * To exit, press the {MENU} button or turn the power off.

Viewsonic

LCDs :

- * Turn the TV on.
- * Press the {MENU} {9} {9} {1} buttons on the remote.
- * The Service Menu will be displayed.

* To exit, turn the TV Off.

#2

* Turn the TV on.

* Press the {-/} {9} {9} {1} buttons on the remote.

* The Service Menu will be displayed.

* To change pages, press the {MENU} button then the {-/} {9} {9} {1} buttons again.

* Press the {EXIT} button to exit the Service Menu.

Your adjustments will be memorized.

NOTES:

* *You'll have to make adjustments separately for different input signals (component, composite, RGB, HDMI).*

* *Many of the parameters are not accessible.*

* *Pressing the "User Initialise" Menu will erase all channels and personal settings.*

CRTs :

* Press and hold the {2} button on the remote while turning the power on.

* Keep the {2} button pressed for at least 4 seconds.

* The Service Menu will be displayed.

* To exit, turn the power off.

PLASMA DISPLAYS:

PDM-1 50"

* Hold down the {VOL -} button ON THE PLASMA DISPLAY.

* Press the {STATUS} button 3 times on the remote control.

(Status button is the one below Power button)

* The Service Menu (CAT) will be displayed.

(CAT = Computer Aided Test Menu)

* Use the cursors keys on the remote to select a mode.

* And press the action key {} to access the menu.

* To exit each mode, use the {R} button.

* To exit the CAT menu, use the {STATUS} button.

* To exit, press the {POWER} button on the Plasma.

• Hitachi

PLASMAS :

HP

LCDs :

- * While the LCD is on, unplug the power cable.
- * Then while pressing the {INPUT} & {VOL -} buttons on the remote, plug the power cable back into the outlet.

- * When it powers up you will see a little "k" appear in brackets.
- * Then on the TV, press and hold {VOL -} & {CH -} down and release.
- * The Service Menu will be displayed.

- * Use {CH+} {CH -} buttons to navigate
- * Use {VOL+} {VOL -} buttons to adjust the value.

- * Turn the set off to exit the Service Menu.

|||| [Sharp] ||||

PLASMAS :

PL-4260N / PL-5060N

- * Turn the TV on.
- * Press the {MENU} button and select "User OSD Menu".
- * Select "Audio", "Settings" and then "Balance".
- * Press the {9} {1} {8} {OK} buttons on the remote.
- * The Service Menu will be displayed.

Remote - Control Keys:

{MENU} Enter/Exit the Service Menu
{UP} {DOWN} arrows Select Items
{RIGHT} arrow Enter Lower-Level Menus
{RIGHT} {LEFT} arrows . Change Adjustment Values

{BACK} Return to Upper-Level Menu

TV - Control Keys:

{MENU} Enter/Exit the Service Menu

{CH+} {CH-} Select Items

{VOL+} Enter Lower-Level Menu

{VOL+} {VOL-} Change Adjustment Values

* To exit, press {9} {1} {8} {9} buttons on the remote.

NOTE: If the "M" character appears on the screen,
press the {MENU} button first.

XX XXXXX

PE-4200N / PL-4200N / PL-5000N

* Hold down {VOL -} button ON THE PLASMA TV.

* While still holding down the {VOL -} button,
press {RECALL} on the remote 3 times.

* The Service Menu will be displayed.

* Use the {1} {2} button to navigate main menu items.

* Use the {3} {4} buttons to navigate sub-menu items.

* Use the {VOL+} {VOL -} buttons to change settings.

* To exit, turn the power off.

Hyundai

TVs :

* Press the {MUTE} {MENU} {OK} {SLEEP} buttons on the remote.

* The Service Menu will be displayed.

- * Use the {VOL+} {VOL-} buttons to change settings.
- * Press the {OK} button to save and exit.

iiyama

MONITORS :

- * Turn the Display off.
- * Press the {POWER} button twice while holding down the {MENU} button.
- * Then press the {POWER} button again while holding down the {-} button.
- * Press the {MENU} button to enter the Service Mode.
- * To exit, press the {POWER} button.

JVC

PLASMAS / LCDs / CRTs / RPTVs :

- * Press the {MENU} button and go to the User Menu screen, make sure that the indicator (arrow) is pointed and highlights the "Picture Control".
- * The buttons on top of the remote are set to TV & VCR respectively.
- * Set sleep timer to "0" minutes and while it is displayed, simultaneously press the {VIDEO STATUS} & {DISPLAY} buttons.
- * The Service Menu will be displayed.
- * Use the number keys {1-9} to select a category.
- * Use the {CH+} {CH-} buttons to select options.
- * Use the {VOL+} {VOL-} buttons to change settings.
- * Use the {MUTING} button to save settings.
- * Press the {BACK} button to exit the Service Menu.

* Press the {MENU} button to exit.

PLASMAS :

* Press the {INPUT} {6} {1} {9} buttons on the remote.

* The Service Menu will be displayed.

* Input Select: Show Inputs needs to be set to "ALL" .

If it is set to "ACTIVE", It'll NOT work.

<<< WARNING - WARNING - WARNING - WARNING - WARNING >>>

Do NOT Hit the OK Button while the "ADC Calibration" option is selected on the service menu. Apparently, this will recalibrate the Dell W5001C according to whatever is being fed via the HDMI input. In the factory, a proprietary image (provided by Pixelworks) is used. If you do it at home, you may as well kiss the set goodbye. It cannot be undone, and you will likely have to return the set.

Fujitsu

PLASMAS :

* Fujitsu has a Service Menu with limited function.

* Press and hold the {ENTER} button on the remote until the Service Menu is displayed:

Monitor Mode A - Monitor Mode B - Extend Adjust

* Using the remote keys, select a Mode and press {ENTER} to access it.

* Monitor Mode A :

Fan Settings

Temperature Reading

Hours Meter

To determine total hours, add RGB and video for the total hours on the plasma (each number represents hours on that selected input).

Disregard total hours. That's the number of hours the Plasma is plugged in.

Monitor Mode A - Monitor Mode B - Extend Adjust

* Using the remote keys, select a Mode and press {ENTER} to access it.

* Monitor Mode A :

Fan Settings

Temperature Reading

Hours Meter

To determine total hours, add RGB and video for the total hours on the plasma (each number represents hours on that selected input).

Disregard total hours. That's the number of hours the Plasma is plugged in.

* Monitor Mode B :

Shows error codes, if any.

* Extend Adjust :

Fan Mode

AGC

V Screen Orbiter

RS232 Baud Rate

Default (CAUTION: pressing default will reset the hours counter to zero).

* Press menu to toggle from one menu to another.

Funai

Emerson / Symphonic

TVs :

* Enter Menu or Picture Menu.

* Then press the {9} {3} {0} {1} buttons.

* The Service Menu will be displayed.

* To exit, press the {MENU} button or turn the power off.

#2 xxx

* Enter the Main Menu.

or

<<< WARNING - WARNING - WARNING - WARNING - WARNING >>>

Do NOT Hit the OK Button while the "ADC Calibration" option is selected on the service menu. Apparently, this will recalibrate the Dell W5001C according to whatever is being fed via the HDMI input. In the factory, a proprietary image (provided by Pixelworks) is used. If you do it at home, you may as well kiss the set goodbye. It cannot be undone, and you will likely have to return the set.

Fujitsu

PLASMAS :

- * Fujitsu has a Service Menu with limited function.
- * Press and hold the {ENTER} button on the remote until the Service Menu is displayed:

Monitor Mode A - Monitor Mode B - Extend Adjust

- * Using the remote keys, select a Mode and press {ENTER} to access it.

- * Monitor Mode A :

Fan Settings

Temperature Reading

Hours Meter

To determine total hours, add RGB and video for the total hours on the plasma (each number represents hours on that selected input).

Disregard total hours. That's the number of hours the Plasma is plugged in.

- * Monitor Mode B :

Shows error codes, if any.

- * Extend Adjust :

Fan Mode

AGC

V Screen Orbiter

RS232 Baud Rate

Default (CAUTION: pressing default will reset the hours counter to zero).

- * Press the {RIGHT} button for 2 seconds to access options.
- * Use the {LEFT} {RIGHT} buttons to change settings.

- * Press the {EXIT} button to exit the Adjustment Mode.
- * Press the {EXIT} button again to exit the Service Menu.

Horizon

TVs :

- * Enter the 'Main Menu'.
- * Then press the {4} {7} {2} {5} buttons.

- * The Service Menu will be displayed.

- * Use the {UP} {DOWN} buttons to select items.
- * Use the {LEFT} {RIGHT} buttons to change settings.

- * To exit, press the {MENU} button or turn the power off.

|||| [Vestel] ||||

#2 xxx

- * Enter the 'Main Menu' and access the 'Install Menu' .
- * Then press the {4} {7} {2} {5} buttons.

- * The Service Menu will be displayed.

- * Use the {UP} {DOWN} buttons to select items.
- * Use the {LEFT} {RIGHT} buttons to change settings.

- * To exit, press the {MENU} button or turn the power off.

HP

LCDs :

- * While the LCD is on, unplug the power cable.
- * Then while pressing the {INPUT} & {VOL -} buttons on the remote, plug the power cable back into the outlet.

- * When it powers up you will see a little "k" appear in brackets.
- * Then on the TV, press and hold {VOL -} & {CH -} down and release.
- * The Service Menu will be displayed.

- * Use {CH+} {CH -} buttons to navigate
- * Use {VOL+} {VOL -} buttons to adjust the value.

- * Turn the set off to exit the Service Menu.

|||| [Sharp] ||||

PLASMAS :

PL-4260N / PL-5060N

- * Turn the TV on.
- * Press the {MENU} button and select "User OSD Menu".
- * Select "Audio", "Settings" and then "Balance".
- * Press the {9} {1} {8} {OK} buttons on the remote.
- * The Service Menu will be displayed.

Remote - Control Keys:

{MENU} Enter/Exit the Service Menu
 {UP} {DOWN} arrows Select Items
 {RIGHT} arrow Enter Lower-Level Menus
 {RIGHT} {LEFT} arrows . Change Adjustment Values
 {BACK} Return to Upper-Level Menu

TV - Control Keys:

{MENU} Enter/Exit the Service Menu

{CH+} {CH-} Select Items
{VOL+} Enter Lower-Level Menu
{VOL+} {VOL-} Change Adjustment Values

* To exit, press {9} {1} {8} {9} buttons on the remote.

NOTE: If the "M" character appears on the screen,
press the {MENU} button first.

XX

PE-4200N / PL-4200N / PL-5000N

- * Hold down {VOL -} button ON THE PLASMA TV.
- * While still holding down the {VOL -} button,
press {RECALL} on the remote 3 times.
- * The Service Menu will be displayed.
- * Use the {1} {2} button to navigate main menu items.
- * Use the {3} {4} buttons to navigate sub-menu items.
- * Use the {VOL+} {VOL -} buttons to change settings.
- * To exit, turn the power off.

Hyundai

TVs :

- * Press the {MUTE} {MENU} {OK} {SLEEP} buttons on the remote.
- * The Service Menu will be displayed.
- * To exit, turn the power off.

- * While the LCD is on, unplug the power cable.
- * Then while pressing the {INPUT} & {VOL -} buttons on the remote, plug the power cable back into the outlet.
- * When it powers up you will see a little "k" appear in brackets.
- * Then on the TV, press and hold {VOL -} & {CH -} down and release.
- * The Service Menu will be displayed.
- * Use {CH+} {CH -} buttons to navigate
- * Use {VOL+} {VOL -} buttons to adjust the value.
- * Turn the set off to exit the Service Menu.

TVs :

- * Unplug the power cable.
- * Press and hold the {CH+} & {VOL+} buttons.
or
Press and hold the {CH+} & {VOL -} buttons.
- * While holding both buttons, plug in the power cable.
- * The TV will turn on with the Service Menu displayed.
- * Use the {CH+} {CH -} buttons to select items.
- * Use the {VOL+} {VOL -} buttons to adjust values.
- * To exit, turn the set off.

Sony

PLASMA / LCD / CRT / RPTV :

- * Put the TV in Standby Mode.
- * Then press the following buttons on the remote:

{DISPLAY} {5} {VOL+} {POWER}

or

{DISPLAY} {5} {POWER}

on the remote control to put TV in standby.

- * Turn the TV Off using the {POWER} button on the TV.
- * Using the buttons on the TV:
- * Turn the TV On while pressing the {PRG -} & {VOL -} buttons
- * The Service Menu will be displayed.
- * Use {PR+} {PR -} buttons to select items.
- * Use {VOL+} {VOL -} buttons to change values.
- * To exit, turn the TV Off.

Toshiba

LCDs :

- * Press the {MENU} button on the remote.
- * Highlight the "Picture" icon.
- * Press the {9} {3} {0} {1} buttons on the remote.
- * The Service Menu will be displayed:
 - o Options
 - o Adjustments
 - o Selections
- * Use the {OK} button to access and navigate through these Modes.
- * Use the {VOL +} {VOL-} {P+} {P-} buttons to move through options and change settings.
- * To exit, press the {MENU} button.

* To change pages, press the {MENU} button then the {-/--} {9} {1} buttons again.

* Press the {EXIT} button to exit the Service Menu. Your adjustments will be memorized.

NOTES:

* You'll have to make adjustments separately for different input signals (component, composite, RGB, HDMI).

* Many of the parameters are not accessible.

* Pressing the "User Initialise" Menu will erase all channels and personal settings.

CRTs :

* Press and hold the {2} button on the remote while turning the power on.

* Keep the {2} button pressed for at least 4 seconds.

* The Service Menu will be displayed.

* To exit, turn the power off.

Yamaha

PLASMA DISPLAYS:

PDM-1 50"

* Hold down the {VOL -} button ON THE PLASMA DISPLAY.

* Press the {STATUS} button 3 times on the remote control. (Status button is the one below Power button)

* The Service Menu (CAT) will be displayed.
(CAT = Computer Aided Test Menu)

* Use the cursors keys on the remote to select a mode.
* And press the action key {} to access the menu.

* To exit each mode, use the {R} button.
* To exit the CAT menu, use the {STATUS} button.
* To exit, press the {POWER} button on the Plasma